



Interior Molding Trim

▼ Flat Battens ▼



◀ **"Ruff-Stuff" Luan-Covered Battens-White**
99921- 1" x 8' Length
99923- 1" x 9' Length
95022- 1 1/2" x 8' Length



Crystal Oak Batten
 ▶ **95009-** 1" x 8' Wood
95020- 1 1/2" x 8' Wood
95019- 2" x 8' Wood
95021- 4" x 8' Wood



Smooth Finish Batten
 ▶ **95009-W-** 1" x 8' Wood-White
95023- 1 1/2" x 8' Wood-White



Maple Wood Batten
 ▶ **95009-M-** 1" x 8'
95024- 1 1/2" x 8'
95019-M- 2" x 8'



"Hampton Grey"
 ▶ **95009-HG-** 1" x 8'
95020-HG- 1 1/2" x 8'
95019-HG- 2" x 8'



Wood Cove Mold
 ▶ **95013-** 1 1/4" x 10'-Medium Pecan
95013-W- 1 1/4" x 10' White




Door Casing ▼
 ▶ **95015**
 2 1/8" x 7' Wood-Medium Pecan
95015-W-
 2 1/8" x 7' Wood-White

▼ Outside/Inside Corners ▼

"Tri-Mold" Luan-Covered Corner Trim - 8' Length

This trim can work as an outside *or* an inside corner- can be bent either way!

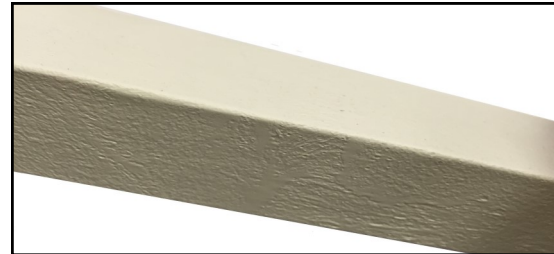


▲ **99924-RS-** "Ruff-Stuff" Finish-White (pictured above)
99924-OAK- Western Oak
99924-HG- "Hampton Grey"
99924-WH- White
99924-MP- Maple

▼ Shoe/ Quarter Round ▼



◀ **95012-** 7/16" x 8' Wood- Crystal Oak
95012-W- 7/16" x 8' White
95012-M- 7/16" x 8' Maple Bacon

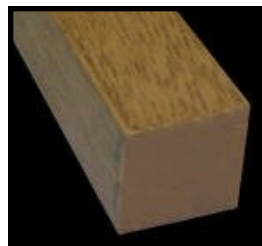

◀ 5/8" x 5/8" x 8'
Square Cleat/ Shoe
95025- Medium Pecan
95025-W- White

Interior Refurb

