



Interior Molding Trim

▼ Flat Battens ▼



"Ruff-Stuff" Luan-Covered Batten- White
 ◀ **99921**- 1" x 8' Length
99923- 1" x 9' Length
95022- 1 1/2" x 8' Length
95019-RS- 2" x 8' Length



Crystal Oak Batten
 ◀ **95009**- 1" x 8' Wood
95020- 1 1/2" x 8' Wood
95019- 2" x 8' Wood
95021- 4" x 8' Wood



Smooth Finish Batten
 ◀ **95009-W**- 1" x 8' Wood-White
95023- 1 1/2" x 8' Wood-White



Maple Wood Batten
 ◀ **95009-M**- 1" x 8'
95024- 1 1/2" x 8'
95019-M- 2" x 8'



"Hampton Grey" Batten
 ◀ **95009-HG**- 1" x 8'
95020-HG- 1 1/2" x 8'
95019-HG- 2" x 8'



Wood Cove Mold
 ◀ **95013**- 1 1/4" x 10'-Medium Pecan
95013-W- 1 1/4" x 10' White



Door Casing ▼
 ◀ **95015**
 2 1/8" x 7' Wood-Medium Pecan
95015-W-
 2 1/8" x 7' Wood-White

▼ Outside/Inside Corners ▼


"Tri-Mold" Luan-Covered Corner Trim- 8' Length

This trim can work as an outside *or* an inside corner- It can be bent either way!



▲ **99924-RS**- "Ruff-Stuff" Finish- White (pictured above)
99924-OAK- Western Oak
99924-HG- "Hampton Grey"
99924-WH- White **99924-MP**- Maple

White Crown Molding ▼

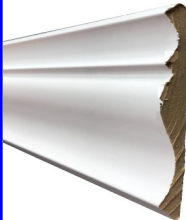

◀ **95034**- Small Crown Molding-
 *1/2" Thick x 2 3/4" Tall x 10' Long
95035- Large Crown Molding-
 *1/2" Thick x 5 1/4" Tall x 10' Long



White Base Board ▼

◀ **95004**- Small Base Board- *1/2" Thick x 2 3/4" Tall x 10' Long
95005- Large Base Board- *9/16" Thick x 5 1/4" Tall x 10' Long

▼ Shoe/ Quarter Round ▼



◀ **95012**- 7/16" x 8' Wood- Crystal Oak
95012-W- 7/16" x 8' White
95012-M- 7/16" x 8' Maple Bacon



Square Cleat/ Shoe
 *5/8" x 5/8" x 8'
 ◀ **95025**- Medium Pecan
95025-W- White

Interior Refurb

