



Interior Molding Trim

▼ Flat Battens ▼



◀ "Ruff-Stuff" Vinyl-Covered Battens-White
99921- 1" x 8' Length
99923- 1" x 9' Length
95022- 1 1/2" x 8' Length



Crystal Oak Batten
 ▶ **95009**- 1" x 8' Wood
95020- 1 1/2" x 8' Wood
95019- 2" x 8' Wood
95021- 4" x 8' Wood



Smooth Finish Batten
 ▶ **95009-W**- 1" x 8' Wood-White
95023- 1 1/2" x 8' Wood-White



Maple Wood Batten
 ▶ **95009-M**- 1" x 8'
95024- 1 1/2" x 8'
95019-M- 2" x 8'



"Hampton Grey"
 ▶ **95009-HG**- 1" x 8'
95020-HG- 1 1/2" x 8'
95019-HG- 2" x 8'



Wood Cove Mold
 ▶ **95013**- 1 1/4" x 10'-Medium Pecan
95013-W- 1 1/4" x 10' White



Door Casing ▼
 ▶ **95015**
 2 1/8" x 7' Wood-Medium Pecan
95015-W-
 2 1/8" x 7' Wood-White

▼ Outside Corners ▼



▶ **96021**-1" x 8' Plastic-Medium Pecan
96021-W- 1" x 8' Plastic-White



▶ **Lip Mold**
 * 7/8" x 8' Plastic
96019- Medium Pecan
96019-W- White




▶ **99924**- "Ruff-Stuff" Vinyl-Covered Corner Trim-White-8' Length
 It works as an inside *or* an outside corner!



Inside Corner
 ▶ **95010**- 7/8" x 8' Wood-Medium Pecan
95010-W- 7/8" x 8' Wood-White

▼ Shoe/ Quarter Round ▼

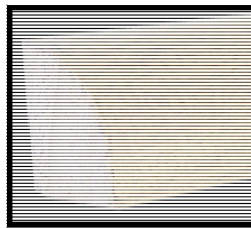

▶ **95012**- 7/16" x 8' Wood-Crystal Oak
95012-W- 7/16" x 8' White
95012-M- 7/16" x 8' Maple Bacon



▶ 5/8" x 5/8" x 8' Square Cleat/Shoe
95025- Medium Pecan
95025-W- White

Interior Refurb

