



# Interior Molding Trim

## ▼ Flat Battens ▼



◀ **"Ruff-Stuff" Luan-Covered Battens-White**  
**99921-** 1" x 8' Length  
**99923-** 1" x 9' Length  
**95022-** 1 1/2" x 8' Length



**Crystal Oak Batten**  
 ▶ **95009-** 1" x 8' Wood  
**95020-** 1 1/2" x 8' Wood  
**95019-** 2" x 8' Wood  
**95021-** 4" x 8' Wood



**Smooth Finish Batten**  
 ▶ **95009-W-** 1" x 8' Wood-White  
**95023-** 1 1/2" x 8' Wood-White



**Maple Wood Batten**  
 ▶ **95009-M-** 1" x 8'  
**95024-** 1 1/2" x 8'  
**95019-M-** 2" x 8'



**"Hampton Grey"**  
 ▶ **95009-HG-** 1" x 8'  
**95020-HG-** 1 1/2" x 8'  
**95019-HG-** 2" x 8'



**Wood Cove Mold**  
 ▶ **95013-** 1 1/4" x 10'-Medium Pecan  
**95013-W-** 1 1/4" x 10' White





**Door Casing ▼**  
 ▶ **95015**  
 2 1/8" x 7' Wood-Medium Pecan  
**95015-W-**  
 2 1/8" x 7' Wood-White

## ▼ Outside/Inside Corners ▼

**"Tri-Mold" Luan-Covered Corner Trim - 8' Length**

This trim can work as an outside \*or\* an inside corner- can be bent either way!

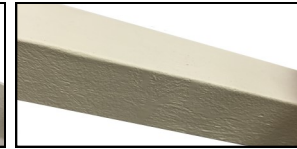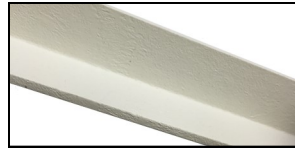

▲ **99924-RS-** "Ruff-Stuff" Finish-White (pictured above)  
**99924-OAK-** Western Oak  
**99924-HG-** "Hampton Grey"  
**99924-WH-** White  
**99924-MP-** Maple




◀ **96021-** 1" x 8" Plastic-Medium Pecan  
**96021-W-** 1" x 8" Plastic-White




**Inside Corner**  
 ▶ **95010-** 7/8" x 8" Wood-Medium Pecan  
**95010-W-** 7/8" x 8" Wood-White

## ▼ Shoe/ Quarter Round ▼

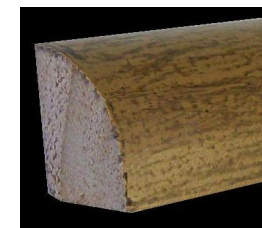

◀ **95012-** 7/16" x 8" Wood-Crystal Oak  
**95012-W-** 7/16" x 8" White  
**95012-M-** 7/16" x 8" Maple Bacon

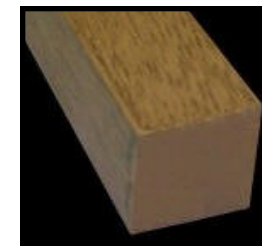

◀ **5/8" x 5/8" x 8'**  
**Square Cleat/ Shoe**  
**95025-** Medium Pecan  
**95025-W-** White

Interior Refurb

