



# Interior Molding Trim

## ▼ Flat Battens ▼




◀ **"Ruff-Stuff" Vinyl-Covered Battens-White**  
**99921-** 1" x 8' Length  
**99923-** 1" x 9' Length  
**95022-** 1 1/2" x 8' Length



**Crystal Oak Batten**  
 ▶ **95009-** 1" x 8' Wood  
**95020-** 1 1/2" x 8' Wood  
**95019-** 2" x 8' Wood  
**95021-** 4" x 8' Wood



**Smooth Finish Batten**  
 ▶ **95009-W-** 1" x 8' Wood-White  
**95023-** 1 1/2" x 8' Wood-White

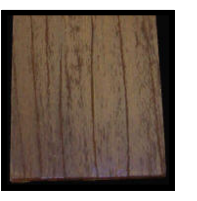

**Maple Wood Batten**  
 ▶ **95009-M-** 1" x 8'  
**95024-** 1 1/2" x 8'  
**95019-M-** 2" x 8'



**"Hampton Grey"**  
 ▶ **95009-HG-** 1" x 8'  
**95019-HG-** 2" x 8'



**Wood Cove Mold**  
 ▶ **95013-** 1 1/4" x 10'-Medium Pecan  
**95013-W-** 1 1/4" x 10' White



**Door Casing ▼**  
 ▶ **95015**  
 2 1/8" x 7' Wood-Medium Pecan  
**95015-W-**  
 2 1/8" x 7' Wood-White

## ▼ Outside Corners ▼



▶ **96021-** 1" x 8' Plastic-Medium Pecan  
**96021-W-** 1" x 8' Plastic-White



▶ **Lip Mold**  
 \* 7/8" x 8' Plastic  
**96019-** Medium Pecan  
**96019-W-** White



▶ **99924-** "Ruff-Stuff" Vinyl-Covered Corner Trim-White-8' Length  
 It works as an inside \*or\* an outside corner!




**Inside Corner**  
 ▶ **95010-** 7/8" x 8' Wood-Medium Pecan  
**95010-W-** 7/8" x 8' Wood-White



## ▼ Shoe/ Quarter Round ▼



▶ **95012-** 7/16" x 8' Wood-Crystal Oak  
**95012-W-** 7/16" x 8' White  
**95012-M-** 7/16" x 8' Maple Bacon

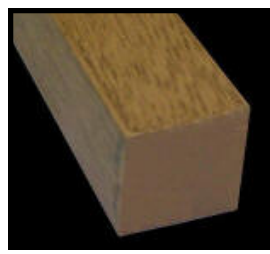

▶ **5/8" x 5/8" x 8'**  
**Square Cleat/ Shoe**  
**95025-** Medium Pecan  
**95025-W-** White

Interior Refurb

