



# BATHTUB MOLDING/ TRIM KITS

## Plastic Tub Trim Kits




\*Includes Trim, 2 Corner Pieces, 2 End Pieces, and Screws. Available in white or almond for all sizes. Use the chart below to determine the correct **part number** for your trim kit.

## ▼ Bath Trim Kit Part Numbers ▼

Tub Size ▼	Almond Plastic	White Plastic
27" x 54"	<b>38060</b>	<b>38060-W</b>
30" x 60"	<b>38065</b>	<b>38065-W</b>
40" x 54"	<b>38065</b>	<b>38065-W</b>
40" x 60"	<b>38065</b>	<b>38065-W</b>
42" x 60"	<b>38065</b>	<b>38065-W</b>
46" x 60"	<b>38065</b>	<b>38065-W</b>

# BATHTUB SURROUND ADHESIVES

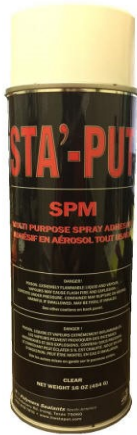

▲ **38091**- Heavy Duty Adhesive  
\*10.6 oz. Cartridge- All-purpose general construction adhesive. Adheres to wood, masonry, concrete and plastic.

◀ **99005**- "Sta-Put" Spray Adhesive  
\*16 Oz.- Multi-purpose adhesive for belly paper, tub and shower enclosures, carpet, etc.



Plumbing



◀ **39012**- Metal Flange Lock for Tubs and Shower Pans

Replacement Caddies for Caddy Surround ▶  
**39004**-Almond **39005**-White  
\*Sold by the pair. 58" Tall

## Plastic Rivets for Wall Surround ▼

Rivets are used to hold wall surrounds securely to drywall backing. We have learned through experience and customer feedback that 24 rivets are sufficient to install one surround. In the diagram on the right, we show a suggested pattern for where to evenly place the rivets around the wall surround. **This is not the only way to do it!** You may use as many rivets as you want, and place them wherever you wish. Just remember that the rivets will be visible, so you want to space them out evenly, and of course use the same color of rivet as the wall surround!



**39013**- Almond **39013-W**- White  
\*Pictured in pairs, but sold individually.

A suggested pattern showing evenly placed rivets on a wall surround ▶

